


For In Field Installation

At installation time, lag down the shade brackets, wind the shade roller springs, and attach shade to toe guards as shown.

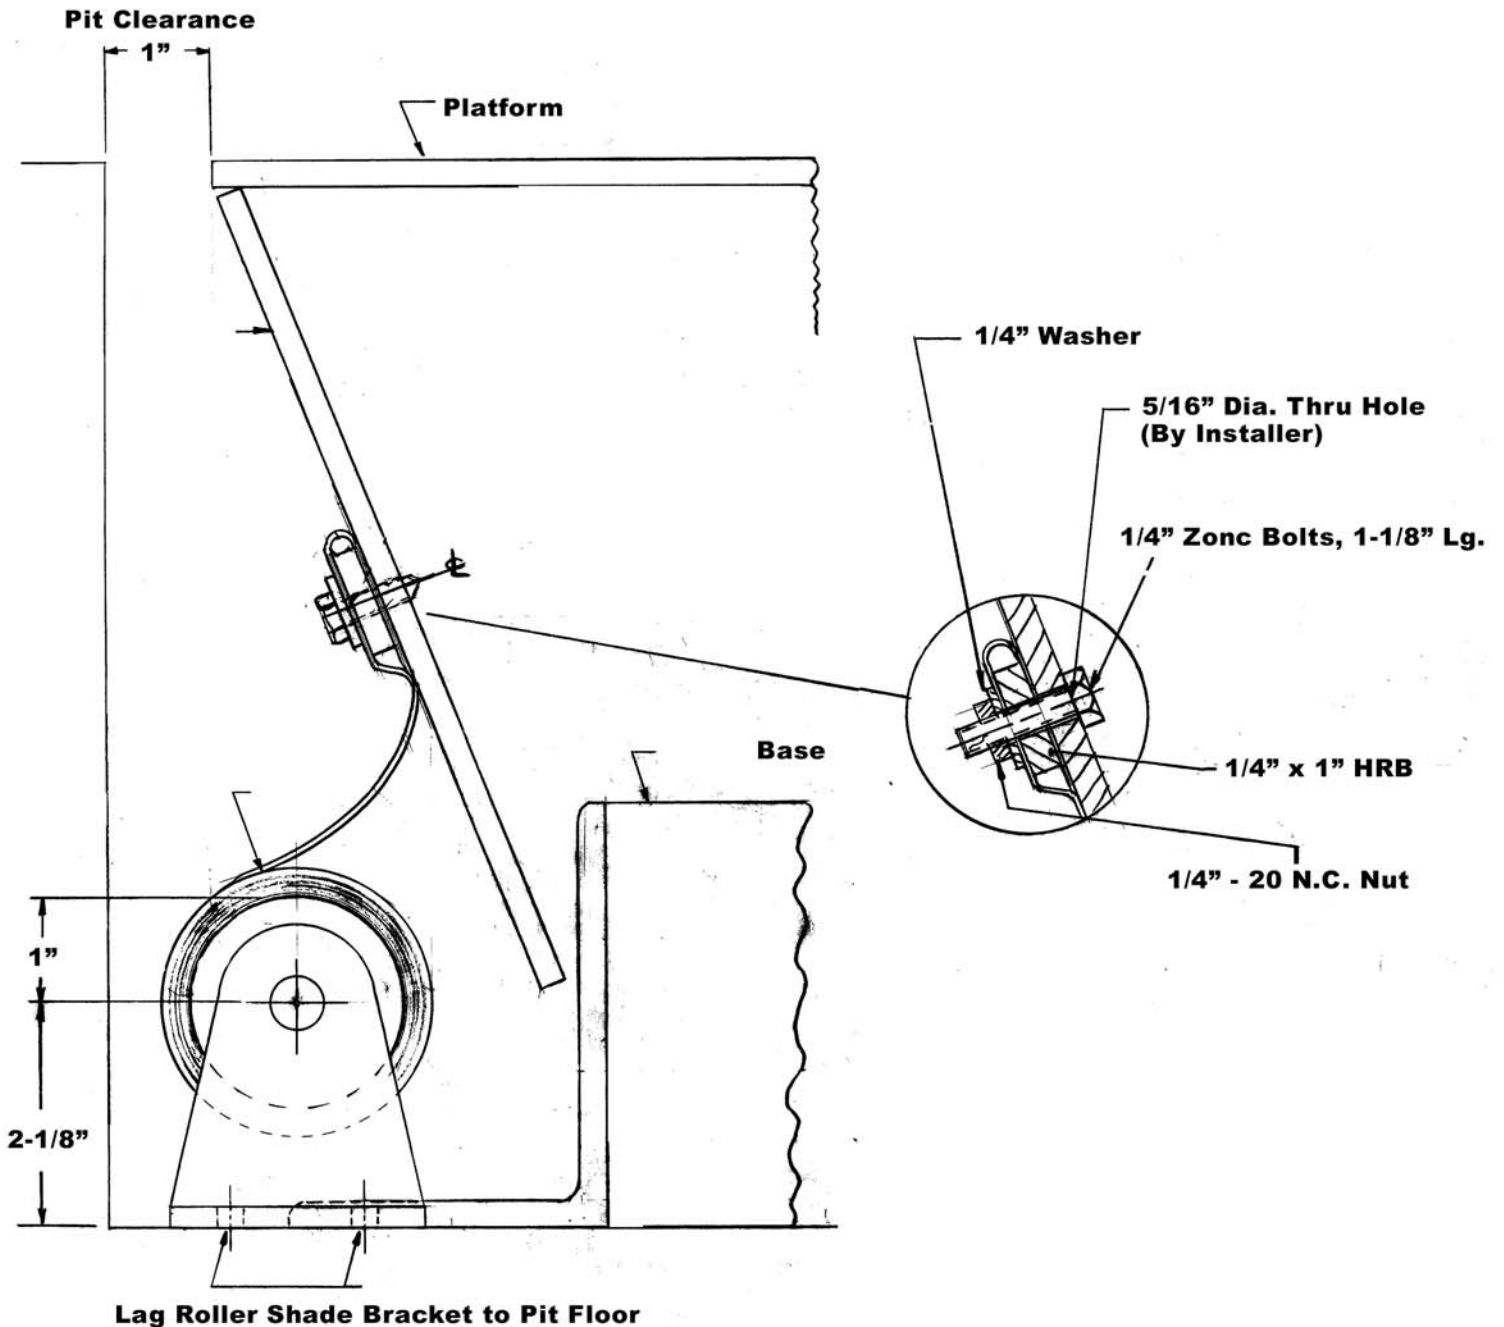

Note: Clamp Hydraulic Line as Required to Clear Shade Rollers.